

# **XL-2 Platinum**

**Security System**

**Owners Manual**



---

# Quick Reference

## TURN SYSTEM ON

Check to make sure the system is READY - Green ready light is lit

Enter your four digit user code

The On/Off (Arm) light will light

Exit through a door designated by your installer as an exit/entry door.

## TURN SYSTEM OFF

Enter through a door designated by your installer as an exit/entry door.

Enter your four digit user code

The System On (Arm) light will go out

## TURN SYSTEM ON AND STAY INSIDE

Check to make sure the system is READY - Green ready light is lit

**STAY** Followed by your user code

The On/Off (arm) light and the Stay light will both light

**REMEMBER:** You must turn the system off if you want to open the door or leave the premises after the exit time has passed.

## TURN THE SYSTEM ON: PERIMETER SENSORS INSTANT MODE AND STAY INSIDE

Check to make sure the system is READY - Green ready light is lit

**INSTANT** followed by  
 **STAY** followed by your user code

The On/Off light, the Instant light and the Stay light will all be on

## SMOKE DETECTOR RESET

Enter your four digit user code

# Introduction

Congratulations on your decision to protect your home or business with the XL-2 Platinum security system. You have chosen a reliable, state of the art security system that is remarkably easy to operate. Your system has been professionally installed by your local Security Company who can explain the specifics of your system.

The keypad is the input and display device for your security system. The following keypad models can interact with your system. Your Security Company will suggest the model most appropriate for your premises and your needs.

**XK-108** - A surface mount keypad containing indicator lights for each of the 8 zones (areas of protection). The door covering the buttons is optional and can be removed.

**7015** - A surface mount keypad containing indicator lights for each of the 8 possible zones (areas of protection).

**7005** - Keypad with a plastic case and a two line English read-out LCD (liquid crystal display). Status messages for the zones (areas of protection) are displayed in simple English.

The XL-2 Platinum is listed by Underwriters Laboratories for Household Fire and Burglary applications.

Throughout this manual the following conventions are used to display the keystrokes required to perform the functions.



- Button labeled BYPASS



- Button labeled INSTANT



- Button labeled STAY



- Button labeled CODE



- Four digit user code

Please keep your manual in a convenient location so you can refer to it if needed.

# SYSTEM REFERENCE

## ZONE DESCRIPTION

1	_____
2	_____
3	_____
4	_____
5	_____
6	_____
7	_____
8	_____

Entry time \_\_\_\_\_ Door \_\_\_\_\_ Exit time \_\_\_\_\_

Entry time \_\_\_\_\_ Door \_\_\_\_\_

Exit time is the same for all designated Entry/Exit doors.

The following **SEND HELP ALERTS** are programmed into my system. **Both Buttons must be pressed at the same time to activate the alert.** The buttons you press depend on which type of keypad you have. Your installer will show you how to activate these emergency keys.

BUTTONS	DESCRIPTION	BUTTONS
Left	_____	# & *
Center	_____	7 & 9
Right	_____	1 & 3

**USER ID    ASSIGNED TO**

- 1 \_\_\_\_\_ (MASTER USER \*
- 2 \_\_\_\_\_ (MASTER USER \*
- 3 \_\_\_\_\_
- 4 \_\_\_\_\_
- 5 \_\_\_\_\_
- 6 \_\_\_\_\_
- 7 \_\_\_\_\_
- 8 \_\_\_\_\_
- 9 \_\_\_\_\_
- 10 \_\_\_\_\_
- 11 \_\_\_\_\_
- 12 \_\_\_\_\_
- 13    Door Strike -        -Yes  No  If No \_\_\_\_\_
- 14    Only Turns System On -Yes  No  If No \_\_\_\_\_
- 15    Ambush/Duress Code -Yes  No  If No \_\_\_\_\_

\*Master Users can Add, Change, or Erase other user codes.

**Monitoring Station Information**

Account # \_\_\_\_\_

Telephone # \_\_\_\_\_

**TURNING THE SYSTEM ON**

You can turn the Burglar portion of your security system on and off. Before you turn the system on it must be ready. If you have a protected door open, or someone is moving by a motion detector the system will not show ready

**The system is ready if the ready light is on or if the display shows:**

SYSTEM READY

**TURN THE SYSTEM ON AND LEAVE**

Enter your four digit user code   

The System On (Arm) light will go on or the display will show:

ON: AWAY .....

Exit through a door designated by your installer as an exit/entry door. You must leave within the period of time known as the exit time. Check the reference sheet for the time that has been set for your system.

**NOT READY**

If the system is **not** ready to be armed the READY light will be **off** and the Zone lights will show which zone or zones are not ready. The zone lights indicate the following conditions or the display will show as below:

- |                                 |           |
|---------------------------------|-----------|
| <b>Fast Blink</b>               | Alarm     |
| <b>Slow Blink/Low Intensity</b> | Bypass    |
| <b>Slow Pulse</b>               | Trouble   |
| <b>Solid On</b>                 | Not Ready |

**Example:** If the Ready light is **not** lit and the zone one light is **solid on**. An alarm sensor on zone one is not normal. This might mean that a window is open or someone is walking through a motion sensor. Check all sensors on zone one and resolve the problem. When all sensors are normal the Ready light will come on and the zone light will go out.

Display shows:

SYSTEM NOT READY

NOT RDY        ZN 01  
FRONT DOOR

**TO TURN THE SYSTEM ON - NOT READY**

Determine which zone or zones is not ready, resolve the problem and turn the system on normally. If the problem cannot be resolved you may **bypass** the zone that is not ready. Bypassing should only be done if the problem on the zone cannot be resolved OR if you intentionally wish to leave the

zone off. Example: you wish to keep the window open for ventilation. **Zones that are bypassed are not protected when the system is on.** See Bypass for the correct procedure.

### TURN SYSTEM ON AND STAY INSIDE

To turn the perimeter portion of your burglar alarm on and move around freely inside is the **STAY** mode.

Check to make sure the system is **READY**; when ready press:

**STAY** Followed by your user code

If successful the On/Off (arm) light will be lit and the Stay light will also be lit or the display shows:

ON: STAY

**REMEMBER:** You must turn the system off if you want to open the door or leave the premises after the exit time has passed.

### TURN THE SYSTEM ON: PERIMETER SENSORS INSTANT MODE AND STAY INSIDE

In **INSTANT STAY** mode the perimeter portion of your burglar alarm system is on and the time delays are eliminated from your normal entry/exit door(s). All interior protection is off so you are free to move around inside.

Check to make sure the system is **READY**, when ready press:

**INSTANT** followed by  
**STAY** followed by your user code

If successful the On/Off light, the Instant light and the Stay light will all be on or the display shows:

ON: STAY INSTANT

### TURN THE SYSTEM ON WITH ALL SENSORS IN INSTANT RESPONSE MODE

In **INSTANT** mode all alarm sensors will report an alarm immediately if activated including the doors that normally have a delay to allow you to turn the system off.

Check to make sure the system is **READY**, when ready press:

**INSTANT** followed by your user code

If successful the On/Off light and the Instant light be on or the display shows:

ON: INSTANT

### BYPASS

Bypass excludes a zone of protection from the security system until it is unbypassed unless you have auto-bypassing enabled. Bypassing can only be done while the system is turned off.

Press the Bypass Button followed by your user code and then the Zone # (1-6) to be bypassed.

**BYPASS**  ZONE

**NOTE:** Bypassed zones are not protected when the system is turned on. After the bypass command has been accepted the keypad will sound one long beep and the zone or zones bypassed will slowly blink or the display shows:

BYPASS ZN 01  
FRONT DOOR

**NOTE:** Temporary users (i.e. baby sitters, housekeepers, etc.) should not be shown the Bypass procedure.

### UNBYPASS

Unbypass returns a bypassed zone to normal operation.

Unbypass is a repeat of the bypass function.

**BYPASS**  ZONE

After unbypassing the zone display will show the state of the zones.

### TURN THE SYSTEM OFF

When you turn off the system you turn off only the burglar portion of your system, any smoke or heat detectors and panic buttons will remain on. You must enter through a designated entry door and turn off the system within the time allowed. You can have different amounts of time for different entry points. See your system reference sheet for the times established for your system.

Enter your four digit user code

If no alarms have taken place, the On/Off light (labeled arm) will go off or the display shows:

SYSTEM READY

If alarms occurred when the system was on, or if a trouble condition exists they will display on the zone indicator lights as follows:

<b>Fast Blink</b>	Alarm
<b>Slow Blink/Low Intensity</b>	Bypass
<b>Slow Pulse</b>	Trouble
<b>Solid On</b>	Not Ready

or the display shows:

ALARM      ZN01  
 FRONT DOOR

Burglary Alarms will sound a steady sound through the keypad(s) and fire alarms will generate a pulsing sound.

**Important:** If an intrusion has taken place while you were away, do not enter until the location has been checked. Call for help from a neighbor's house and wait for the police.

After you have turned the system off with your user code the message on display keypads will show:

ALARM MEM    ZN 01  
 FRONT DOOR

To clear the display of the alarm or trouble conditions and silence the audible alert :

Enter your four digit user code     again.

## USER CODES

### **ADD OR CHANGE A USER CODE**

Users can be entered or modified directly through the keypad. Your system can have up to 6 different User Codes. User #1 is the **Master User** and is the only one allowed to add, or delete other users.

Press the Code button followed by the four digit master user code then the user # and the new four digit user code. The keypad will beep after each digit is pressed.

	Master User Code	User ID	New User Code
<div style="border: 2px solid black; padding: 2px; display: inline-block;">CODE</div>	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>	US	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>

There is a record sheet provided in the back of the book to help you plan and record your users. On this sheet your installer will indicate if you have chosen to dedicate a user code to send an emergency signal in the case of Ambush or Duress. You may also have chosen to reserve one user code that is only allowed to turn the system on, this code will not be able to turn the system off.

### **DELETE A USER CODE**

To delete user #3, press the code button followed by the four digit master user code, then the user # then \* to delete.

Master User Code    User ID    \* to delete

CODE

   

3    \*

NOTE: User #1, the master user, cannot be deleted but it can be changed using the ADD OR CHANGE USER PROCEDURE.

### **TURN SYSTEM ON ONLY (Maid Code)**

If you choose to have a code that cannot turn the system off, but can turn the system on, have your installer program this feature. If programmed, user code #5 will have System On capability only and you can issue this code to a temporary user so they can secure the premises when they leave.

## KEYPAD - SEND HELP - CONDITIONS

### Zone Directory

Zone Directory will scroll through the descriptors of all the Zones. This command is available only on English read-out keypads.

.    Press    #    4

### Show System Time

Displays the time and date - this time is critical if you are using the auto-arming feature or sending a periodic test signal to your Central Station. This command is only available on English read out keypads.

.    Press    #    7

### Show Auto On Time

If you have chosen to use the Auto On Feature you need this quick command, it shows the scheduled Auto On time. If your system is not programmed for Auto On, the keypad will beep.

Press    #    8

### Set Clock

Set Clock lets you set the date and time for the system. For additional security your installer may have programmed your system to require you to use your user code.

Press    #    3        [hour][minute][month][day][year]

User Code if required

The English read out keypad will prompt you for the required entries.

Your system can be programmed for 3 separate Send Help Alerts which would send an emergency signal to your central station. See System Reference sheet to see which have been programmed for your system.

### Duress

Your system can be programmed to send an emergency signal to the Central Station if you are forced to enter the premises. If you choose to include this feature, User Code number 6 is dedicated to this function and must only be used under a duress circumstance.

### Quick On - (Quick Arming) Yes No

If programmed by your installer, QUICK ON, or Quick Arming allows you to turn the system on to the away mode without user code. **NOTE:** Turning your system Off always requires a valid User Code.

# 1

### Quick Forced On - Yes No

If programmed by your installer Quick Forced On, allows you to turn the burglar portion of your alarm system on to the away mode bypassing all zones that are not ready.

# 2

**NOTE:** A valid user code is still required to turn the system off.

**NOTE:** This feature is disabled on UL installations.

### Quick Bypass Yes No

If you have quick bypass programmed for your system you will not have to use your user code to bypass zones. The quick bypass procedure is:

**BYPASS**

ZONE (1-6)

**NOTE:** Bypassed zones are not protected when the system is turned on. After the bypass command has been accepted the keypad will sound one

long beep and the zone or zones bypassed will slowly blink or the display will show:

BYPASS ZN 01  
FRONT DOOR

**NOTE:** Temporary users (i.e. baby sitters, housekeepers, etc.) should not be shown the Bypass procedure.

### Turn Chime On/Off

Chime is an optional feature that causes the keypad to chime when selected doors are opened when the burglary protection is off or disarmed.

Only your installer can program a zone for the chime feature, but once programmed you can turn chime on or off to meet your daily needs. To turn chime on or off. **Press # 6**

### Set Auto On Time

Set Auto On Time lets you set the time your system will automatically turn on.

**Press # 5     [hour] [minute]**

The English read out keypad will prompt you for the required entries.

### Door Strike

To activate door strikes

**Press # 9     [Door #]**

where the door # is as follows

1 \_\_\_\_\_ 3 \_\_\_\_\_  
2 \_\_\_\_\_ 4 \_\_\_\_\_